


# Type 1098-EGR Upstream or Downstream “Wide-Open” Monitor

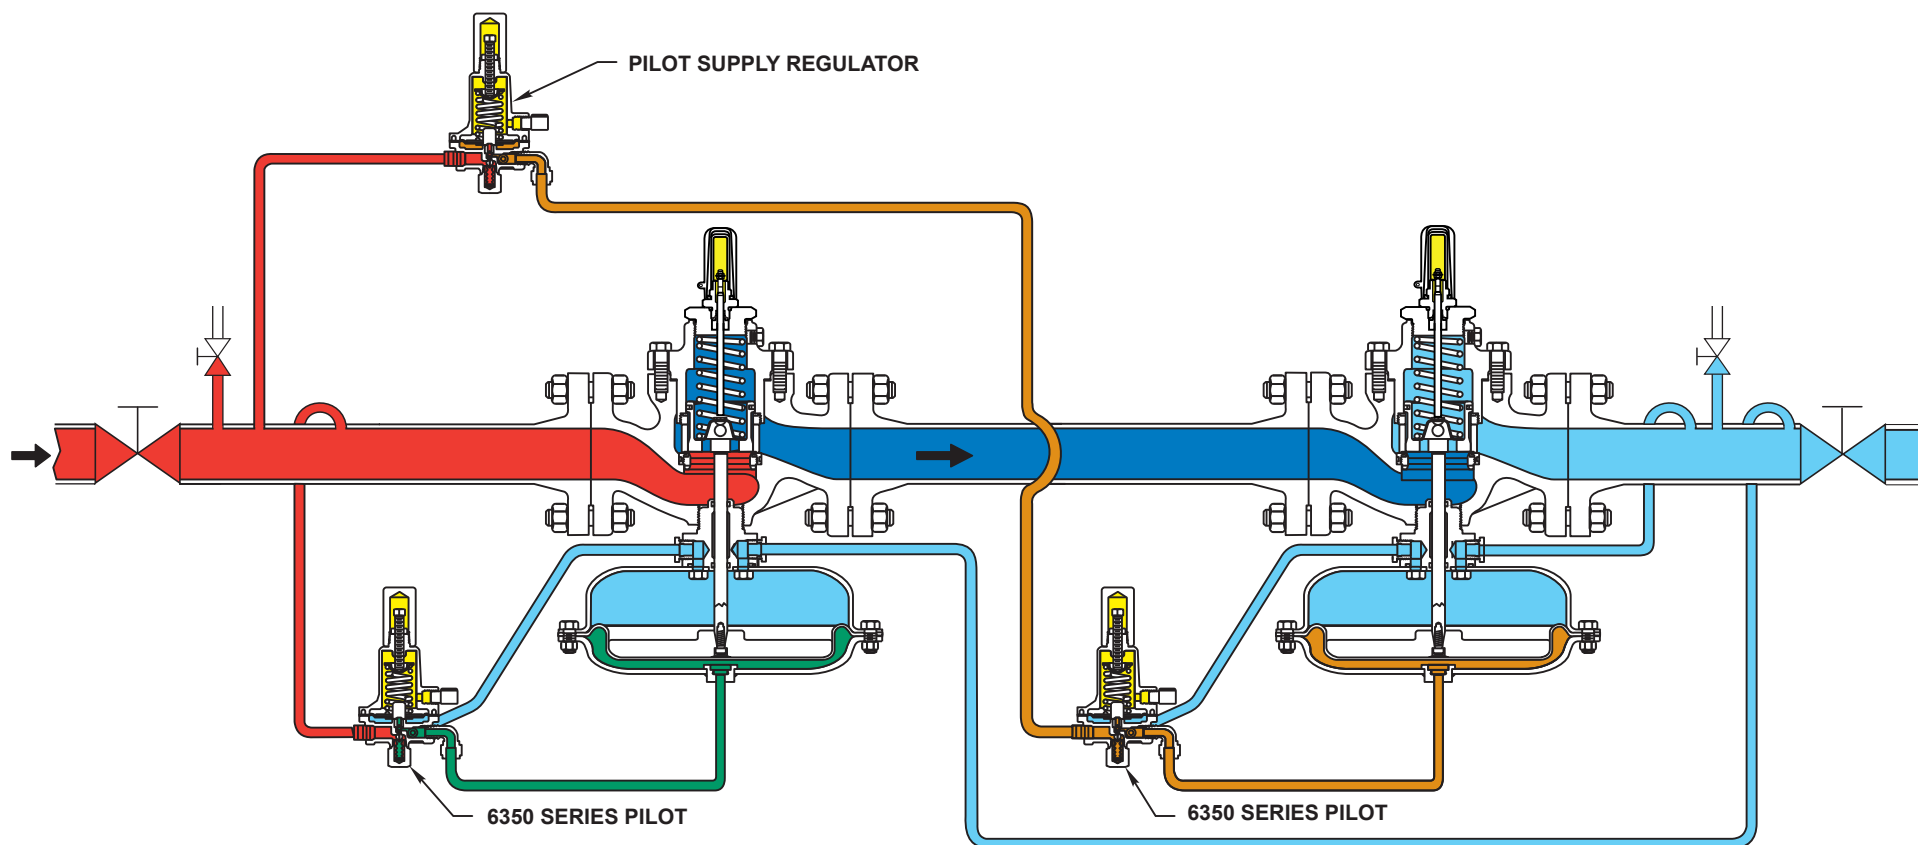

- INLET PRESSURE
- OUTLET PRESSURE
- LOADING PRESSURE
- MONITOR LOADING PRESSURE
- ATMOSPHERIC PRESSURE
- INTERMEDIATE PRESSURE

